

Send Mail Box message (KISS)

Key In Simple Selcall



Which bases accept a Mail Box message?

- Perth (W.A) (6199)
- Alice Springs (N.T.) (8199)
- Casino (N.E. NSW) (2199)

Sending a message from HF radio to another HF radio via Telcall+ MAIL BOX

You can send a message from your radio to the cloud MAIL BOX where it is held for up to 7 days to be relayed to another mobile HF radio when they switch on and call a Telcall+ equipped (primary) base. Messages can be sent into one (primary) base and out from another (primary) base. This gives Australia wide coverage mobile to mobile very easily. You can also send and receive mail box messages with Out-n-About.

- Your selcall number must be activated on Telcall+ with Austravel Safety Net.
- Radio must be turned ON.
- Select a channel suitable for the base you intend to use.
- Know how to use your type of HF radio for sending messages.
- Go to Message or Page call send on your HF radio
- Enter destination selcall of the base radio you wish to send a message to. Do beacon test and ping a base to select a good channel.
- Input all 4 digits of the selcall number (e.g. 0880) into a message, followed by the MESSAGE up to 60 characters long.
- Send the message to a Telcall+ base station using the base selcall number.
- The Austravel (primary) base of choice must be able to receive you OK if you are to send a text message.
- Listen for a response from the base when sending a SMS text message or MAIL BOX text message to a base.
- When that transmission is finished (can take up to 30 seconds or more to send) and when and if your radio display shows “**Call Complete**” this means your text message is 100% received at the base and the message is in the mailbox.
- If there is no further reply (*job done nothing more to do, maybe put your radio back on SCAN*)

Enjoy the service.