

# Send SMS Call to a mobile phone (KISS)

## Key In Simple Selcall



### *Which bases can you send SMS messages ?*

- Perth (W.A) (6199)
- Alice Springs (N.T.) (8199)
- Casino (N.E. NSW) (2199)

### *Sending an SMS message to a mobile phone from your HF radio*

You can send text messages from your HF radio directly to any mobile phone in Australia. Text messages are limited to 64 characters. When you send an SMS it's sent to a (primary) Austravel base station selcall number. (i.e. Perth 6199, Casino 2199 etc.).

- Your selcall must be activated on Telcall+ with Austravel Safety Net.
- Radio must be turned ON.
- Select a channel suitable for the base you intend to use. Use Beacon test.
- Know how to use your type of HF radio for sending messages.
- Enter destination selcall of the base radio you wish to send the SMS through. Do beacon test and ping a base to select a good channel.
- Enter destination mobile phone number in the beginning of the actual message you are about to type.
- Input all 10 digits of the phone number (e.g. 0427983329) then followed by the MESSAGE up to a total of 64 characters including the mobile phone number.
- Send the message to a Telall+ base station using the base selcall number.
- The Austravel (primary) base of choice must be able to receive you OK if you are to send a text message. (Hence prior Beacon test to select channel)
- Listen for a response from the base when sending a SMS text message or MAIL BOX text message to a base.
- When that transmission is finished (can take up to 30 seconds or more to send) and when and if your radio display shows "**Call Complete**" this means your SMS text message is 100% received at the base and the SMS is sent to the mobile number.
- If there is no further reply (*job done nothing more to do, maybe put your radio back on SCAN*)

*Enjoy the service.*